


## ETPV 5760

## PRODUCT DESCRIPTION SHEET

DE AT BE FR NL IT GR SE FI NO DK

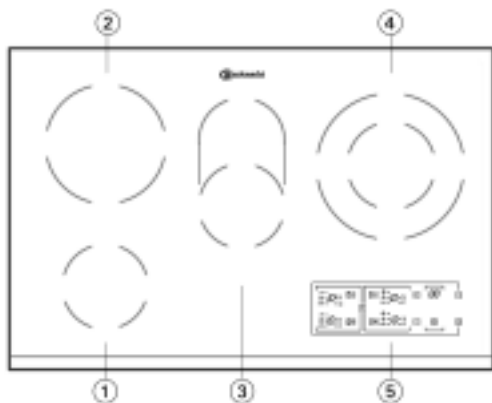

1. Radiant cooking zone,  $\varnothing$  145
2. Radiant cooking zone,  $\varnothing$  180
3. Radiant oval dual cooking zone,  $\varnothing$  145 x 250
4. Radiant dual cooking zone,  $\varnothing$  210 x 120
5. Display


### Important:

To avoid permanently damaging the glass-ceramic top, do not use:

- Pots with bottoms that are not perfectly flat.
- Metal pots with enamelled bottom.


Any aesthetic defects (scratches, marks etc.) must be reported at the time of installation.

## HOB MOUNTING DIMENSIONS (mm)

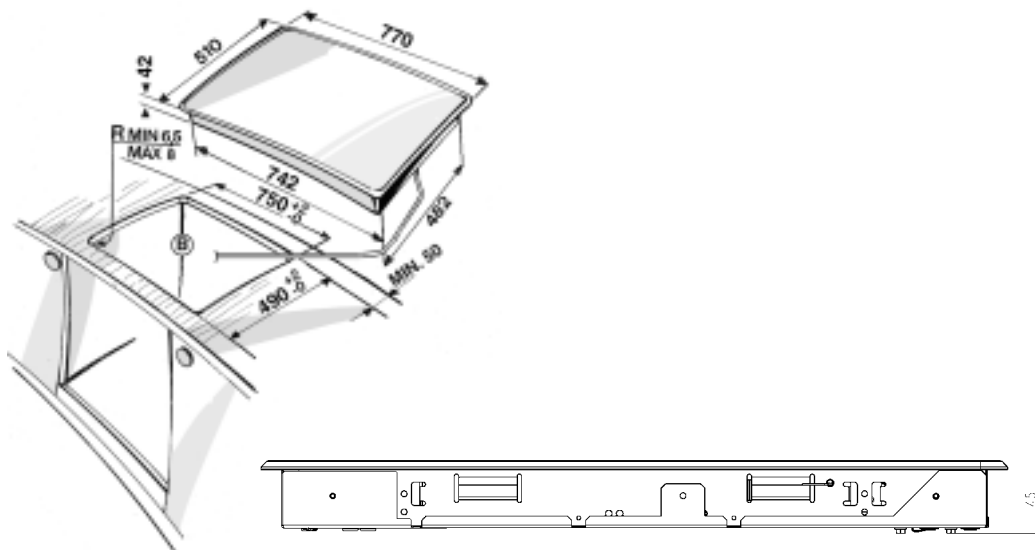

Type PLENL 230 V~/400 V 3 N~ 50 Hz 6,8 kW

## USING THE HOB

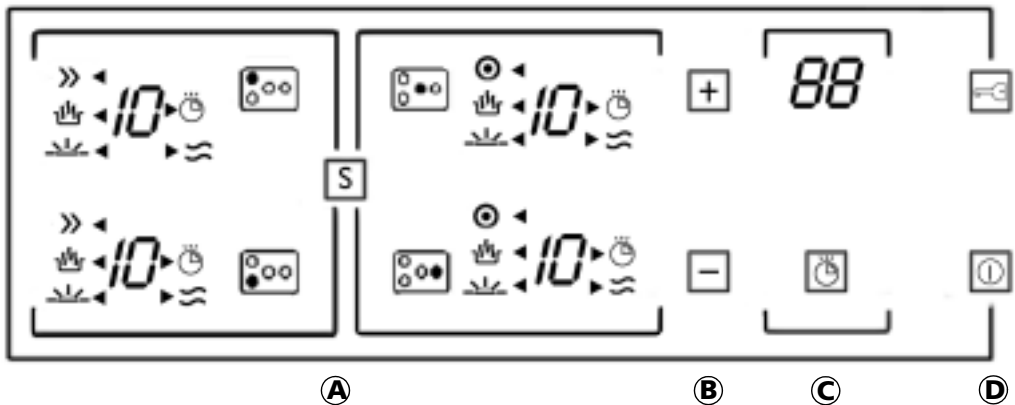

The button must be pressed for about 2 sec. to switch the hob on.

The indication "0" appears in area **A** on the 4 displays. If within about 25 sec. none of the cooking zones is activated, the hob switches itself off automatically on safety grounds.



Choose the button for the desired cooking area and press it. The display of the chosen cooking area becomes brighter.



Press the +/- buttons in area **B** within 5 sec. to adjust the required cooking setting.

The first two cooking steps correspond to the Gentle heat function and the Keep hot functions (if provided). The other selectable cooking settings go from 1 - 10.

The highest selectable cooking setting equates to the TURBO setting (if provided).

The additional functions GENTLE HEAT, KEEP HOT and TURBO HEAT are indicated in the display by a red arrow. All selections are stopped and cancelled by simultaneously pressing the + and - buttons.

**IMPORTANT:** For safety reasons, the hob is equipped with an automatic cut-off function, which, depending on the set power output, switches off the cooking zone at maximum power at the earliest after one hour or after 6 hours at minimum power, if no setting change takes place.



The Dual and Fast boil SPECIAL FUNCTIONS of each cooking area can be switched on or off with this button. The appropriate cooking area must be switched on for the special functions to be selected.

The following special functions are available (if provided):



**DUAL ZONE FUNCTION**

Enables the external heating ring of the cooking zone to be switched on.



**FAST BOILING FUNCTION**

With this function the cooking zone is heated to the hottest setting for a specified time for bringing to the boil. It is then automatically switched back to selected cooking setting to continue cooking (e.g. selected high setting 5 + fast boil = 5 min. at the highest setting + then switching back automatically to setting 5).



The TIME SWITCH function [if available] can be used both as a short-time alarm and also allocated to each selected cooking area.

To be able to allocate the time switch function to a specified cooking zone, the cooking zone must first be selected in area **A** and switched on. The function is switched on by pressing the clock symbol button. The control LED starts to flash. This means that the cooking time can be set within 20 sec. by means of the +/- buttons (1-99 min.).

After a 20 sec. start-up the timer function begins automatically and the control LED goes on permanently. The 20 seconds can also be prematurely confirmed, after confirming the clock symbol button.

An acoustic signal sounds for a maximum of 1 minute at the end of the preset cooking time. However, the signal can be switched off in advance by pressing the clock symbol button.


If the time switch function has been allocated to the cooking area, this will be switched off and the control LED extinguished.

Only one cooking zone at a time can be operated with the time switch function.

When using the function as a short-time alarm, ensure that the short-time alarm is only activated after confirming the clock symbol button.



The CHILD SAFETY function is switched on with this button and indicated by an additional red control LED. With the exception of the hob's On and Off buttons, all other buttons are locked. This function remains on even after the hob has been switched off and on again and can be cancelled by pressing the button again for 2 seconds.

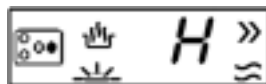

#### RESIDUAL HEAT INDICATOR

The residual heat indicator **"H"** goes on or flashes alternating with **"0"** with the switched off cooking zone while the temperature is still above the safety limit.

#### DESCRIPTION OF THE ADDITIONAL FUNCTIONS:



##### GENTLE HEAT FUNCTION

Maintains a permanently low temperature in the cooking zone. Using suitable cookware, it is ideal for: leaving dough to rise, butter to soften, keeping baby bottles or baby food warm, making yoghurt, melting chocolate etc.



##### KEEP WARM FUNCTION

switches a low power setting on to keep meals warm after cooking.



##### TURBO HEAT

switches the highest power setting on to bring water to the boil rapidly.